



FC9166-9160




*Read manual before use*

**PHILIPS**

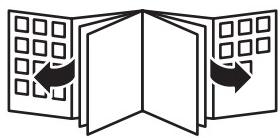

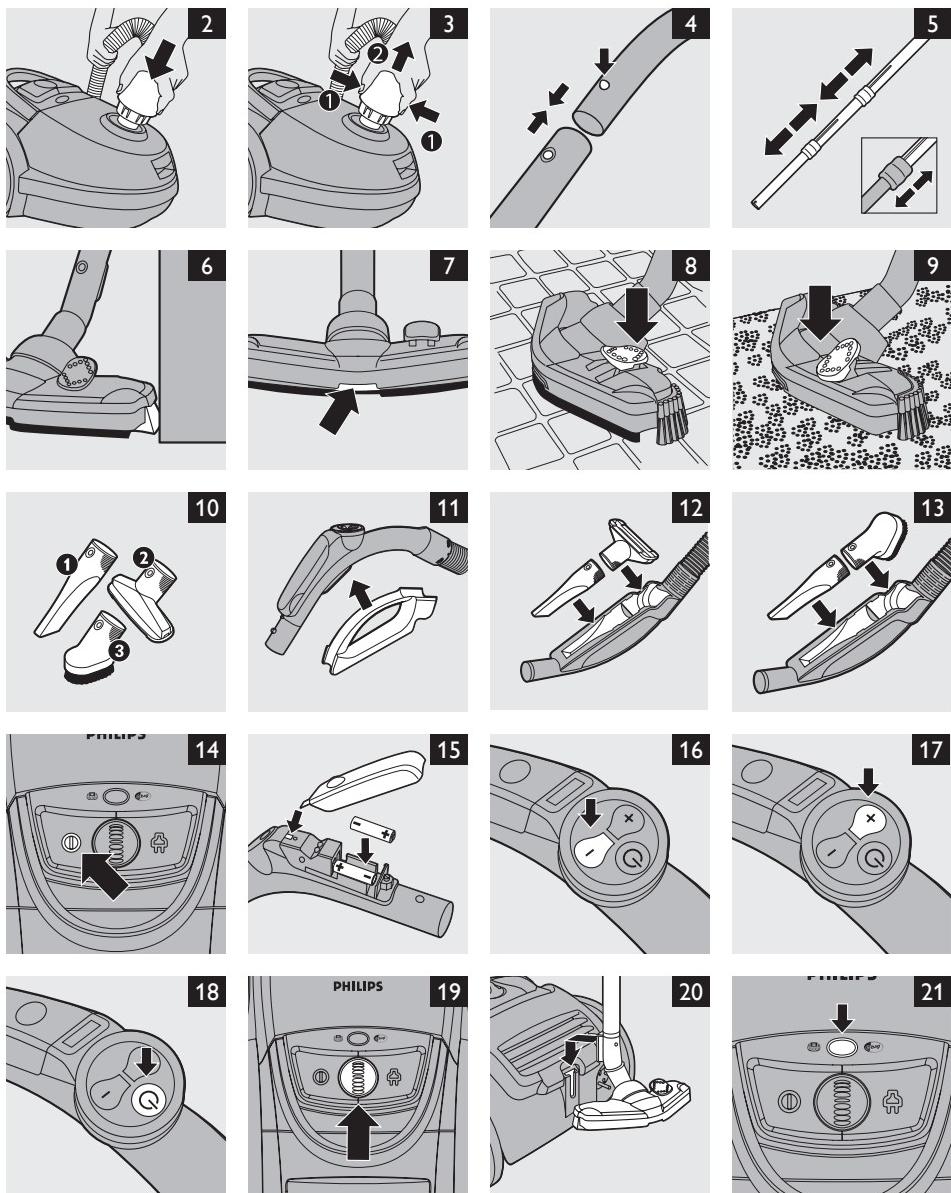

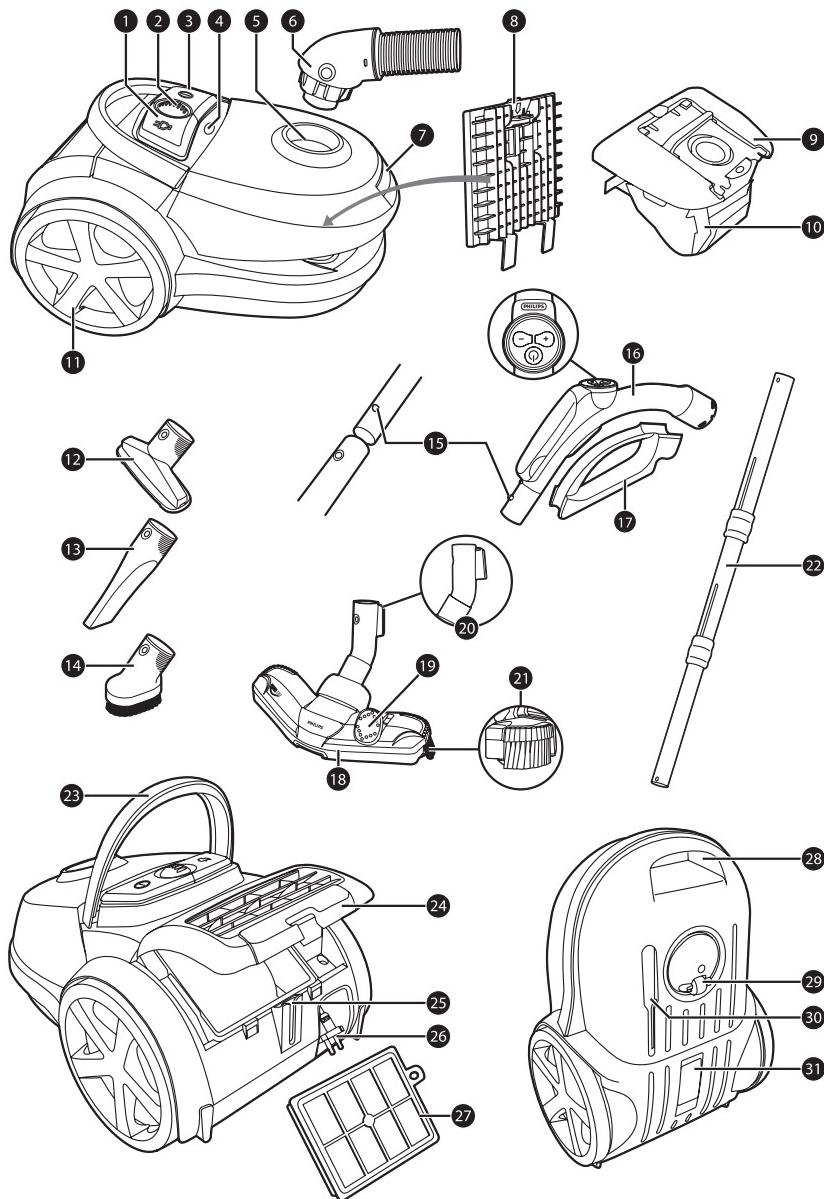

**ENGLISH 6**

한국어 11

繁體中文 16

**General description (Fig. 1)**

- 1 Cord rewind button
- 2 Suction power knob (in case of remote control: infrared receiver)
- 3 On/off button
- 4 Dustbag-full indicator
- 5 Hose connection opening
- 6 Hose with swivel connector
- 7 Dust cover release tab
- 8 Motor Protection Filter holder
- 9 Dustbag holder
- 10 Dustbag
- 11 Rear wheel
- 12 Small nozzle
- 13 Crevice nozzle
- 14 Brush nozzle
- 15 Button coupling
- 16 Hose with handgrip (specific types only: with remote control)
- 17 Accessory holder
- 18 Tri-Active nozzle
- 19 Rocker switch for carpet/hard floor settings
- 20 Parking/storage ridge
- 21 Side brush
- 22 Tri-Scopic tube
- 23 Hinging top handle
- 24 Filter grille (open)
- 25 Parking slot
- 26 Mains plug
- 27 Super/Ultra Clean Air HEPA Filter
- 28 Front handle
- 29 Swivel wheel
- 30 Storage slot
- 31 Type plate

**Important**

Read this user manual carefully before you use the appliance and save it for future reference.

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Keep the appliance out of the reach of children.
- Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and the vacuum cleaner is switched on.
- When you use the vacuum cleaner to vacuum ashes, fine sand, lime, cement dust and similar substances, the pores of the dustbag become clogged. As a result, the dustbag-full indicator will indicate that the dustbag is full. Replace the dustbag, even if it is not full yet (see chapter 'Replacement').
- Never use the appliance without the Motor Protection Filter. This could damage the motor and shorten the life of the appliance.
- Only use Philips s-bag™ paper dustbags.

- The translucent display panel is made of recyclable polycarbonate (>PC/ABS<).

## **Electromagnetic fields (EMF)**

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and in accordance with the instructions in this user manual, the appliance is safe to use according to scientific evidence available today.

### **Preparing for use**

#### **Hose**

- 1 To connect the hose, push it firmly into the appliance ('click') (Fig. 2).
- 2 To disconnect the hose, push the buttons and pull the hose out of the appliance (Fig. 3).

#### **Tri-Skopic tube**

- 1 To connect the tube to the handgrip, press the spring-loaded lock button on the handgrip and insert the handgrip into the tube. Fit the spring-loaded lock button into the opening in the tube ('click') (Fig. 4).
- 2 To disconnect the tube from the handgrip, press the spring-loaded lock button and pull the handgrip out of the tube.
- 3 Adjust the tube to the length you find most comfortable during vacuuming. Press one of the two collars downwards and pull the tube part above the collar upwards or push it downwards (Fig. 5).

Keep the tube away from your face when you extend it. The tube is very long.

#### **Tri-Active nozzle**

- 1 To connect and disconnect the Tri-Active nozzle, use the same method as for the tube.
  - The Tri-Active nozzle is a multi-purpose nozzle for carpets and hard floors (Fig. 6). The side brushes catch more dust and dirt at the sides of the nozzle and allow you to clean better along furniture and other obstacles.
  - The opening at the front of the nozzle allows you to vacuum larger particles (Fig. 7).
- 2 Hard floor setting: push the rocker switch on top of the nozzle with your foot to make the brush strip come out of the housing. At the same time, the wheel is lifted to prevent scratching and to increase manoeuvrability (Fig. 8).
- 3 Carpet setting: push the rocker switch again to make the brush strip disappear into the nozzle housing. The wheel is lowered automatically (Fig. 9).

#### **Crevice nozzle, small nozzle and brush nozzle**

- 1 To connect the crevice nozzle (1), the small nozzle (2) or the brush nozzle (3), use the same method as for the tube. (Fig. 10)

Connect the nozzles directly to the handgrip of the hose or to the tube.

#### **Accessory holder**

- The accessory holder can be snapped onto the handgrip (Fig. 11). To store nozzles in the accessory holder, push them into the holder. To detach the accessories, pull them out of the holder.  
You can store two accessories at a time in the accessory holder:
  - Crevice nozzle and small nozzle (Fig. 12).
  - Please note how the small nozzle must be placed in the accessory holder.
  - Crevice nozzle and brush nozzle (Fig. 13).

## Using the appliance

- 1** Pull the cord out of the appliance and put the mains plug in the wall socket.
- 2** Press the on/off button on top of the appliance with your foot to switch on the appliance (Fig. 14).

### Infrared remote control (specific types only)

- 1** Place the batteries in the battery compartment (Fig. 15).

#### Make sure the - and + poles point in the right direction.

- With the infrared remote control, you can set the suction power to one of 5 different suction power settings. When you switch on the appliance, it always starts running at the highest suction power setting.
- To reduce the suction power by one setting, press the - button (Fig. 16).
- To increase the suction power by one setting, press the + button (Fig. 17).

- 2** Press the standby button to switch off the vacuum cleaner temporarily, for instance when you have to move some furniture. (Fig. 18)

- 3** To continue vacuum cleaning, press the standby button again. The appliance then starts operating at the previously selected suction power setting again.

### Adjusting suction power

- During vacuum cleaning, you can adjust the suction power with the knob on top of the appliance. (Fig. 19)
- If your appliance has a remote control, you can adjust the suction power with the + and - buttons. See section 'Infrared remote control (specific types only)'.
- Use maximum suction power to vacuum clean very dirty carpets and hard floors.
- Use minimum suction power to vacuum clean curtains, table carpets, etc.

### Parking the tube

- If you want to pause for a moment, insert the ridge on the nozzle into the parking slot to park the tube in a convenient position (Fig. 20).

## Replacing the dustbag

#### Always unplug the appliance before you replace the dustbag.

- Replace the dustbag as soon as the dustbag-full indicator has changed colour permanently, i.e. even when the nozzle is not placed on the floor (Fig. 21).

- 1** Pull the cover upwards to open it (Fig. 22).

- 2** Lift the dustbag holder out of the appliance (Fig. 23).

#### Make sure you hold the dustbag upright when you lift it out of the appliance.

- 3** Pull at the cardboard tag to remove the full dustbag from the holder (Fig. 24).

► The dustbag is sealed automatically.

- 4** Slide the cardboard front of the new dustbag into the two grooves of the dustbag holder as far as possible. (Fig. 25)

- 5** Reinsert the dustbag holder into the vacuum cleaner.

*Note: If you have not inserted a dustbag, you cannot close the cover.*

## Cleaning/replacing filters

Only wipe the appliance with a moist cloth.

Always unplug the appliance before you clean or replace the filters

### Motor Protection Filter

Clean the permanent Motor Protection Filter every time you replace the dustbag.

- 1** Remove the dustbag holder with the dustbag (Fig. 23).
- 2** Press the filter holder release tab (1) and take the Motor Protection Filter holder out of the appliance (2). (Fig. 26)
- 3** To clean the filter, shake it over a dustbin.
- 4** Put the clean filter back into the filter holder. Fit the two lugs of the filter holder behind the ridge at the bottom to ensure that it fits properly at the top (1). Then press the filter holder home ('click') (2) (Fig. 27).
- 5** Place the dustbag holder with the dustbag back into the appliance.

### Super/Ultra Clean Air HEPA Filter

This appliance is equipped with either the Super Clean Air HEPA Filter or the Ultra Clean Air HEPA Filter. These filters are located in the back of the appliance. They are able to remove 99.5% and 99.9%, respectively, of all particles down to 0.0003mm in size from the outlet air. This not only includes normal house dust, but also harmful microscopic vermin such as dust mites and their excrements, which are well-known causes of respiratory allergies.

Replace the HEPA Filter every six months.

- 1** Open the filter grille (Fig. 28).
- 2** Remove the old filter (Fig. 29).
- 3** Insert the new filter into the appliance.
- 4** Close the filter grille and push the bottom corners until they snap home (Fig. 30).

## Storage

- 1** Slide the tube parts into each other to reduce the tube to its shortest length.
- 2** Switch off the appliance and remove the mains plug from the wall socket.
- 3** Press the cord rewind button to rewind the mains cord (Fig. 31).
- 4** To store the appliance in upright position, insert the ridge on the nozzle into the storage slot (Fig. 32).
- 5** Always put the Tri-Active nozzle in the carpet setting when you store it. Prevent the side brushes from becoming bent (Fig. 8).

## Ordering accessories

If you have any difficulties obtaining dustbags, filters or other accessories for this appliance, please contact the Philips Customer Care Centre in your country or consult the worldwide guarantee leaflet.

### Ordering dustbags

- Philips Classic s-bag™ paper dustbags are available under type number FC8021.
- Philips Clinic s-bag™ high-filtration dustbags are available under type number FC8022.

- Philips Anti-Odour s-bag™ paper dustbags are available under type number FC8023.
- Philips Long Performance s-bag™ dustbags for extra-long cleaning performance are available under type number FC8024.

### **Ordering filters**

- Super Clean Air Filters are available under type number FC8030.
- Super Clean Air HEPA Filters are available under type number FC8031.
- Ultra Clean Air HEPA Filters are available under service number 4322 004 92990.

### **Environment**

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 33).
- Batteries contain substances that may pollute the environment. Do not throw away batteries with the normal household waste, but dispose of them at an official collection point for batteries. Always remove the batteries of the remote control before you discard and hand in the appliance at an official collection point.

### **Guarantee & service**

If you need information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

### **Troubleshooting**

#### **1 The suction power is insufficient.**

- The dustbag may be full.

Replace the dustbag.

- The filters may be dirty.

Clean or replace the filters.

- The suction power may be set to a low setting.

Set the suction power to a higher setting.

- The nozzle, tube or hose may be blocked up.

To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way around. Switch on the vacuum cleaner to force the air through the blocked-up item in opposite direction.

#### **2 The infrared remote control (specific types only) does not function**

- Perhaps the batteries do not make proper contact or have not been inserted in the proper way.

Remove the lid of the battery compartment and push the batteries back into place. Make sure that the - and + poles point in the right direction.

- The batteries may be empty.

Replace the batteries.

## 각 부의 명칭 (그림 1)

- 1 코드 되감기 버튼
- 2 흡입력 조절기(리모콘의 경우: 적외선 수신기)
- 3 전원 버튼
- 4 먼지 봉투 교체 표시등
- 5 호스 연결 구멍
- 6 회전식 연결부가 있는 호스
- 7 먼지 덮개 분리 탭
- 8 모터 보호 필터 거치대
- 9 먼지 봉투 거치대
- 10 먼지 봉투
- 11 뒷바퀴
- 12 소형 노즐
- 13 틈새 노즐
- 14 브러시 노즐
- 15 버튼 결합 기능
- 16 손잡이가 달린 호스(특정 모델만 해당: 리모콘 포함)
- 17 액세서리 거치대
- 18 Tri-Active 노즐
- 19 카페트/일반 바닥재 설정을 위한 로커 스위치
- 20 임시보관/보관 걸이
- 21 측면 브러시
- 22 3단 연장관
- 23 경첩식 상단 손잡이
- 24 필터 커버(열림)
- 25 임시보관용 흡
- 26 전원 플러그
- 27 수퍼/울트라 클린 에어 HEPA 필터
- 28 앞면 손잡이
- 29 회전식 바퀴
- 30 보관용 흡
- 31 명판

## 주의 사항

본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- 제품에 전원을 연결하기 전에, 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 만약 플러그나 코드 또는 제품이 손상되었을 경우에는 제품을 사용하지 마십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터, 필립스 지정 서비스 센터 또는 전문 기술자에 의뢰하여 교체하십시오.
- 제품은 어린이의 손이 닿지 않는 장소에 보관하십시오.
- 물, 다른 용액 또는 가연성 물질은 절대 흡입하지 마십시오. 타고 남은 재는 완전히 꺼지기 전까지 절대 흡입하지 마십시오.
- 호스, 연장관 또는 기타 액세서리가 진공 청소기에 연결되어 있고 진공 청소기의 전원이 켜져 있을 때 이를 눈, 귀에 갖다 대거나 입에 넣지 마십시오.
- 진공 청소기를 사용하여 재, 미세한 모래, 석회, 시멘트 먼지 및 유사한 물질을 청소하면 먼지 봉투 구멍이 막히게 됩니다. 이로 인해 먼지 봉투 교체 표시등에 먼지 봉투가 가득 찬 것으로 표시됩니다. 먼지 봉투가 가득 차지 않은 경우에도 먼지 봉투를 교체하십시오(‘교체’란 참조).
- 모터 보호 필터 없이 제품을 사용하지 마십시오. 모터가 손상되고 제품의 수명이 단축될 수 있습니다.

## 12 한국어

- 반드시 필립스 s-bag™ 종이 먼지 봉투를 사용하십시오.
- 반투명 표시창은 재활용 가능한 폴리카보네이트(>PC/ABS<)로 만들어졌습니다.

### EMF(전자기장)

이 필립스 제품은 EMF(전자기장)와 관련된 모든 기준을 준수합니다. 이 사용 설명서의 지침에 따라 적절하게 취급할 경우 이 제품은 안전하게 사용할 수 있으며 이는 현재까지의 과학적 증거에 근거하고 있습니다.

### 사용 전 준비

#### 호스

- 1 호스를 연결하려면 ‘찰칵’ 소리가 날 때까지 제품 안으로 밀어 넣으십시오 (그림 2).
- 2 호스를 분리하려면 버튼을 누르고 제품에서 호스를 잡아당겨 빼십시오 (그림 3).

#### 3단 연장관

- 1 손잡이에 연장관을 연결하려면 손잡이에 있는 스프링식 잡금 버튼을 누르고 손잡이를 연장관에 장착하면 됩니다. 스프링식 잡금 버튼이 ‘찰칵’ 소리가 날 때까지 연장관 구멍에 맞추십시오 (그림 4).
- 2 손잡이에서 연장관을 분리하려면 스프링식 잡금 버튼을 누르고 연장관에서 손잡이를 잡아당기십시오.
- 3 청소하면서 사용하기 편한 길이로 연장관을 조절하십시오. 이음 고리 2개 중 하나를 아래쪽으로 누르고 이음 고리의 윗부분의 연장관을 위쪽으로 잡아 당기거나 아래쪽으로 밀어내십시오 (그림 5).

연장관을 펼 때 얼굴과 일정 간격을 유지하십시오. 연장관은 매우 깁니다.

#### Tri-Active 노즐

- 1 Tri-Active 노즐을 연결 및 분리하려면 연장관과 같은 방법을 사용하십시오.
  - Tri-Active 노즐은 카페트 및 딱딱한 바닥에서 사용할 수 있는 다용도 노즐입니다 (그림 6).
- 2 일반 바닥재 설정: 발로 노즐 위쪽의 로커 스위치를 누르면 브러시의 솔 부분이 외장 바깥으로 나옵니다. 동시에 바퀴도 올라가서 굽힘을 방지하고 더 잘 움직이게 됩니다 (그림 8).
- 3 카페트 설정: 로커 스위치를 다시 누르면 브러시의 솔 부분이 노즐 외장 안으로 들어갑니다. 바퀴도 자동으로 내려옵니다 (그림 9).

#### 틈새 노즐, 소형 노즐 및 브러시 노즐

- 1 틈새 노즐(1), 소형 노즐(2) 또는 브러시 노즐(3)을 연결하려면 연장관과 같은 방법을 사용하십시오. (그림 10)
  - 호스 손잡이나 연장관에 노즐을 직접 연결합니다.

#### 액세서리 거치대

- 액세서리 거치대는 손잡이에 끼울 수 있습니다 (그림 11).
  - 액세서리 거치대에 노즐을 보관하려면 거치대에 노즐을 밀어 넣으십시오. 액세서리를 분리하려면 거치대에서 잡아 당기십시오.
- 한 번에 두 개의 액세서리를 액세서리 거치대에 보관할 수 있습니다.
- 틈새 노즐 및 소형 노즐 (그림 12)

소형 노즐을 액세서리 거치대에 장착하는 방법을 확인하십시오.

- 틈새 노즐 및 브러시 노즐 (그림 13)

### 제품 사용

**1** 제품에서 코드를 꺼내고 벽면 콘센트에 전원 플러그를 꽂으십시오.

**2** 제품 상단의 전원 버튼을 발로 눌러서 전원을 켜십시오 (그림 14).

### 적외선 리모콘(특정 모델만 해당)

**1** 배터리함에 배터리를 넣으십시오 (그림 15).

배터리의 극성(+/-)에 맞게 끼우십시오.

- 적외선 리모콘을 사용하여 흡입력을 5가지 설정으로 조절할 수 있습니다. 제품의 전원을 켜면 항상 최고 흡입력으로 작동이 시작됩니다.
- 흡입력을 한 단계 낮추려면 - 버튼을 누르십시오 (그림 16).
- 흡입력을 한 단계 높이려면 + 버튼을 누르십시오 (그림 17).

**2** 가구를 옮겨야 하는 경우와 같이 일시적으로 진공 청소기 스위치를 꺼야할 때 대기 버튼을 누르십시오. (그림 18)

**3** 진공 청소기를 계속 사용하려면 대기 버튼을 다시 누르십시오. 그러면 이전에 선택된 흡입력 설정에서 다시 작동이 시작됩니다.

### 흡입력 조절

- 청소 중에도 제품 상단의 조절기를 이용해 흡입력을 조절할 수 있습니다. (그림 19)
- 제품에 리모콘이 있는 경우 + 및 - 버튼으로 흡입력을 조절할 수 있습니다. ‘적외선 리모콘(특정 모델만 해당)’ 란을 참조하십시오.
- 매우 더러운 카페트 및 딱딱한 바닥을 청소할 때는 흡입력을 최대로 하여 사용하십시오.
- 커튼, 식탁보 등을 청소할 때는 흡입력을 최저로 하여 사용하십시오.

### 연장관 임시보관

- 청소를 잠시 중단하려면 노즐 걸이를 임시 보관용 흠에 끼워서 연장관을 편안하게 세워두십시오 (그림 20).

### 먼지 봉투 교체

먼지 봉투를 교체하기 전에 항상 전원 플러그를 뽑으십시오.

- 먼지 봉투 교체 표시등의 색깔이 바뀌면 즉시 먼지 봉투를 교체하십시오(예를 들어, 노즐을 바닥에 대고 있지 않은 경우도 해당) (그림 21).

**1** 먼지 봉투를 열려면 덮개를 위로 올리십시오 (그림 22).

**2** 제품에서 먼지 봉투 거치대를 들어내십시오 (그림 23).

제품에서 먼지 봉투를 들어올릴 때 똑바로 세워서 잡으십시오.

**3** 거치대에서 가득 찬 먼지 봉투를 분리하려면 딱딱한 판지의 손잡이를 당기십시오 (그림 24).

▶ 먼지 봉투가 자동으로 밀봉됩니다.

**4** 새 먼지 봉투의 판지 앞면을 먼지 봉투 거치대의 2개 흠으로 최대한 밀어 넣으십시오. (그림 25)

**5** 먼지 봉투 거치대를 진공 청소기에 다시 끼우십시오.

참고:먼지 봉투를 끼우지 않으면 덮개를 닫을 수 없습니다.

## 필터 청소/교체

젖은 천으로 제품을 닦으십시오.

필터를 청소하거나 교체하기 전에는 항상 제품 코드를 뽑으십시오.

### 모터 보호 필터

먼지 봉투를 교체할 때마다 영구 모터 보호 필터를 청소하십시오.

- 1 먼지 봉투가 들어있는 먼지 봉투 거치대를 분리하십시오 (그림 23).
- 2 필터 거치대 분리 탭을 누르고(1) 제품에서 모터 보호 필터 거치대를 꺼내십시오 (2). (그림 26)
- 3 필터를 청소하려면 휴지통 위에서 필터를 털어내십시오.
- 4 깨끗해진 필터를 다시 필터 거치대에 끼우십시오. 필터 거치대의 두 돌출부를 아래쪽 흡에 맞추어 윗부분이 잘 맞도록 하십시오(1). 그런 다음 필터 거치대를 ‘찰칵’ 소리가 날 때까지 눌러 제자리에 끼우십시오(2) (그림 27).
- 5 먼지 봉투가 들어있는 먼지 봉투 거치대를 제품에 다시 넣으십시오.

### 수퍼/울트라 클린 에어 HEPA 필터

본 제품에는 수퍼 클린 에어 HEPA 필터 또는 울트라 클린 에어 HEPA 필터가 장착되어 있습니다. 이 필터는 제품 뒤편에 있습니다. 본 필터는 배출 공기에서 나오는 0.0003 mm 크기의 미립자를 각각 99.5% 및 99.9%까지 제거할 수 있습니다. 여기에는 일반 가정 먼지 뿐 아니라 호흡기 알레르기를 유발하는 먼지 진드기 및 진드기 배설물과 같은 해로운 미세 해충도 포함됩니다.

HEPA 필터를 매 6개월마다 교체하십시오.

- 1 필터 커버를 여십시오 (그림 28).
- 2 오래된 필터를 빼내십시오 (그림 29).
- 3 제품에 새 필터를 끼우십시오.
- 4 필터 커버를 닫고 하단 모서리를 밀어서 제자리에 끼우십시오 (그림 30).

### 보관

- 1 연장관끼리 서로 밀어서 가장 짧게 조절하십시오.
- 2 제품 전원을 끄고 벽면 콘센트에서 전원 플러그를 뽑으십시오.
- 3 코드 되감기 버튼을 눌러 전원 코드를 되감으십시오 (그림 31).
- 4 제품을 똑바로 세워서 보관하려면 노즐 걸이를 보관용 흡에 끼우십시오 (그림 32).
- 5 청소기를 보관할 때는 Tri-Active 노즐을 항상 카페트 설정에 두십시오. 측면 브러시가 휘어지지 않도록 하십시오 (그림 8).

### 액세서리 주문

본 제품의 필터나 기타 액세서리를 구하기 어려운 경우에는 필립스 고객 상담실로 문의하거나 제품 보증서를 참조하십시오.

### 먼지 봉투 구매

- 필립스 클래식 s-bag™ 종이 먼지 봉투는 모델 번호 FC8021로 구매하십시오.
- 필립스 클리닉 s-bag™ 미세 여과 먼지 봉투는 모델 번호 FC8022로 구매하십시오.
- 필립스 냄새 제거 s-bag™ 종이 먼지 봉투는 모델 번호 FC8023으로 구매하십시오.

- 장기간 청소 효과를 유지하는 필립스 긴 수명 s-bag™ 먼지 봉투는 모델 번호 FC8024로 구매하십시오.

### 필터 구매

- 슈퍼 클린 에어 필터는 모델 번호 FC8030으로 구매하십시오.
- 슈퍼 클린 에어 HEPA 필터는 유형 번호 FC8031로 구매하십시오.
- 울트라 클린 에어 HEPA 필터는 서비스 번호 4322 004 92990으로 구매하십시오.

### 환경

- 수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 재활용 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다 (그림 33).
- 배터리는 환경을 오염시키는 물질을 포함하고 있습니다. 배터리는 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 배터리 분리 수거함에 버리십시오. 제품을 버리기 전에 항상 리모콘에서 배터리를 분리하여 지정된 수거함에 버려 주십시오.

### 품질 보증 및 서비스

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스전자 홈페이지 ([www.philips.co.kr](http://www.philips.co.kr))를 방문하시거나 필립스 고객 상담실로 문의하십시오. 전국 서비스 센터 안내는 제품 보증서를 참조하십시오. \*(주)필립스전자:(02)709-1200 \*고객 상담실:(080)600-6600(수신자부담)

### 문제 해결

#### 1 흡입력이 약합니다.

- 먼지 봉투가 가득 차 있을 수 있습니다.  
먼지 봉투를 교체하십시오.
- 필터가 더러울 수 있습니다.  
필터를 청소하거나 교체하십시오.
- 흡입력이 낮게 설정되어 있을 수 있습니다.  
흡입력을 더 높은 설정으로 바꾸십시오.
- 노즐, 연장관 또는 호스가 막혔을 수 있습니다.

이물질을 제거하려면 막힌 부분을 분리하여 반대 방향으로 가능한 멀리 연결하십시오. 진공 청소기의 전원을 켜서 막힌 부분에 공기가 반대 방향으로 통하도록 하십시오.

#### 2 적외선 리모콘(특정 모델만 해당)이 작동하지 않습니다.

- 배터리가 올바로 접촉되지 않았거나 올바르게 끼워져 있지 않습니다.  
배터리함의 뚜껑을 열고 배터리를 다시 끼우십시오. 배터리의 극성(-/+에 맞게 끼워졌는지 확인하십시오.
- 배터리가 방전되었을 수 있습니다.  
배터리를 교체하십시오.

## 一般說明 (圖 1)

- 1 收線鉤
- 2 吸力旋鈕 (在遙控的情況下：紅外線接收器)
- 3 開/關按鈕
- 4 集塵袋已滿指示燈
- 5 軟管接口開口
- 6 軟管，隨附旋轉式連接器
- 7 集塵蓋釋放拉片
- 8 馬達防護濾網支托架
- 9 集塵袋支托架
- 10 集塵袋
- 11 後輪
- 12 小吸頭
- 13 隙縫吸頭
- 14 清潔刷吸頭
- 15 按鈕結合機關
- 16 附握柄的軟管 (僅限特定型號：遙控機型)
- 17 配件置放架
- 18 Tri-Active 全方位三效合一吸頭
- 19 地毯/硬質地板設定之搖動開關
- 20 安置/收藏突起部位
- 21 側刷毛
- 22 三截式吸塵管
- 23 鉸鏈式上部握柄
- 24 濾網罩 (開放式)
- 25 安置槽
- 26 電源線插頭
- 27 超淨/極淨空氣 HEPA 濾網
- 28 前端握柄
- 29 轉輪
- 30 收藏槽
- 31 機型標籤

## 重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

- 在您連接電源之前，請檢查本地的電源電壓是否與產品所標示的電源電壓相符。
- 當電線或產品本身受損時，請勿使用產品。
- 如果電線損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 請勿讓孩童接觸本產品。
- 請勿用來吸水或任何其它液體。請勿吸取易燃性物質，且請勿吸取尚未完全冷卻的灰燼。
- 若已連接至吸塵器且吸塵器電源為開啟時，請勿將軟管、吸塵管或其他配件指向眼睛或耳朵，也請勿將其放入口中。
- 當您使用吸塵器來清除灰燼、細沙、石灰、水泥灰塵與類似物質時，集塵袋孔會逐漸阻塞，使得集塵袋已滿指示燈顯示集塵袋已滿。即使集塵袋並未全滿，也請更換集塵袋 (請參閱「更換」單元)。
- 請勿在未安裝馬達防護濾網的時候使用本產品，否則可能會損壞馬達並縮短產品壽命。
- 請務必只使用飛利浦原廠 S-bag™ 紙質集塵袋。
- 半透明顯示面板採用可回收的聚碳酸酯材料 (>PC/ABS<) 製成。

## 電磁場 (EMF)

本飛利浦產品符合電磁場 (electromagnetic fields, EMF) 所有相關標準。若正確處理及依照本使用手冊之說明進行操作，根據現有之科學文獻來看，使用本產品並無安全顧慮。

### 使用前準備

#### 軟管

- 1 若要連接軟管，將軟管用力推入產品固定 (要聽到「喀搭聲」)。(圖 2)
- 2 若要拆開軟管，請按下按鈕並將軟管從吸塵器拉出。(圖 3)

#### 三截式吸塵管

- 1 若要將吸塵管連接至握柄，請按下握柄上的彈簧式鎖定鉤，並將握柄插入吸塵管中。將彈簧式鎖定鉤卡進吸塵管上的開孔 (會聽見「喀噠」一聲)。(圖 4)
- 2 若要從握把移除吸塵管，按下彈簧鎖定按鈕，然後將握把由吸塵管拉出即可。
- 3 使用吸塵器時，請將吸塵管調整到最適合的長度。請將兩個軸環中其中一個向下按，並將軸環上方的吸塵管向上拉或向下推。(圖 5)

當您延長吸塵管時，請保持遠離您的臉部。吸塵管是很長的。

#### Tri-Active 全方位三效合一吸頭

- 1 若要連接或拔除 Tri-Active 全方位三效合一吸頭，請依照吸塵管使用相同的方法。
  - 全方位三效吸頭是地毯及硬質地板專用的多用途吸頭。(圖 6)
  - 兩側吸頭的側刷可吸除更多灰塵及髒污，讓您將家具和其他不易移動的物品清理得更乾淨。
  - 吸頭前端的開口可吸除更大的碎屑。(圖 7)
- 2 硬質地板設定：用腳按下吸頭上方的搖動開關，以將毛刷條從殼體內推出。在此同時，輪子會抬起，可防止刮傷地板又可加強移動性。(圖 8)
- 3 地毯設定：再按一次搖動開關，以將毛刷條收進吸頭殼體內。輪子將會自動放下。(圖 9)

#### 隙縫吸頭、小吸頭與清潔刷吸頭

- 1 若要連接隙縫吸頭 (1)、小吸頭 (2) 或清潔刷吸頭 (3)，請依照吸塵管使用相同的方法。(圖 10)  
請將吸頭直接連接至軟管的握柄上或吸塵管上。

#### 配件置放架

- 配件置放架可以卡進握把上。(圖 11)  
若要將吸頭存放至配件置放架上，請將它們推進置放架。若要移除配件，請將它們從置放架中拉出。
- 您可一次收藏兩樣配件在配件置放架中：
  - 隙縫吸頭與小吸頭 (圖 12)
  - 請注意小吸頭必須如何置放於配件置放架中。
  - 隙縫吸頭與清潔刷吸頭 (圖 13)

### 使用此電器

- 1 請將電線由產品拉出，並將插頭插入牆上插座。
- 2 用腳按下產品頂端的開/關 (on/off) 按鈕，以開啟產品電源。(圖 14)

## 紅外線遙控裝置 (僅限於特定機型)

### 1 將電池置入電池槽內。 (圖 15)

請確定正 (+) 負 (-) 極放置無誤。

- 利用紅外線遙控裝置，您可以將吸塵器的吸力調整到 5 個不同的設定。每次在您開啟吸塵器的電源時，它都會以最大吸力的設定開始運轉。
- 若要將吸力設為減弱一級的設定，請按下 - 按紐。 (圖 16)
- 若要將吸力設為增強一級的設定，請按下 + 按紐。 (圖 17)

### 2 按下待機 (Standby) 按鈕可以暫時關閉吸塵器，例如可在您必須搬動某些家具時使用。 (圖 18)

### 3 若要繼續使用吸塵器，請再次按下待機 (Standby) 按鈕。本產品即會以上次所選取的吸力設定再次開始運作。

## 調整吸力

- 使用吸塵器時，您可以利用吸塵器上方的旋鈕來調整吸力。 (圖 19)
- 如果您的吸塵器有遙控裝置，您可以利用 + 和 - 按鈕來調整吸力。請參閱「紅外線遙控裝置 (僅限於特定機型)」章節。
- 使用最大吸力清潔極度骯髒的地毯與硬質地板。
- 使用最小吸力清潔窗簾、桌墊等。

## 固定吸塵管

- 若您想要暫停片刻，請將吸頭上的突出物插入安置槽，以將吸塵管固定為便於使用的 position。 (圖 20)

## 更換集塵袋

在更換集塵袋之前，請務必拔除電源插頭。

- 如果集塵袋已滿指示燈的顏色長時間改變 (換言之，即使吸頭沒有貼緊地板的情況下)，請立即更換集塵袋。 (圖 21)

### 1 請將蓋子往上拉，掀開蓋子。 (圖 22)

### 2 將集塵袋支托架從本產品中提起。 (圖 23)

請確定從吸塵器中提起集塵袋時開口是向上的。

### 3 拉著紙板拉片，將已滿的集塵袋從支托架中移除。 (圖 24)

► 此集塵袋會自動封口。

### 4 將新集塵袋的紙板前端盡可能套入集塵袋支托架上的兩個狹槽中。 (圖 25)

### 5 將集塵袋支托架重新裝入吸塵器。

注意：若您沒有裝入集塵袋，就無法關上蓋子。

## 清潔/更換濾網

請僅用濕布擦拭本產品。

在清潔或更換濾網之前，請務必拔除電源插頭。

## 馬達防護濾網

每次更換集塵袋時，請清潔永久馬達防護濾網。

### 1 將集塵袋支托架連同集塵袋一起一併拆除。 (圖 23)

### 2 按下濾網支托架釋放拉片 (1)，將馬達防護濾網支托架從產品中移除 (2)。 (圖 26)

- 3** 若要清潔濾網，請在垃圾桶上抖動濾網。
- 4** 將乾淨的濾網裝回濾網支托架中。將濾網支托架的兩個凸耳套在底部凸緣的後方，以確保上緣正確套入(1)，並將濾網支托架壓回原位(會聽見「喀噠」一聲)(2)。(圖 27)
- 5** 將集塵袋支托架連同集塵袋一起一併裝回本產品中。

#### 超淨/極淨空氣 HEPA 濾網

此產品具備超淨空氣 HEPA 替換濾網或極淨空氣 HEPA 替換濾網。這些濾網位於產品背面，分別可移除外部空氣中 99.5% 或 99.9% 小至 0.0003 公釐的所有粒子。這不只包括一般住家灰塵，還有肉眼看不見的有害寄生蟲，如塵及其糞便，皆為常見的呼吸道疾病過敏原。

每隔六個月更換 HEPA 濾網。

- 1** 打開濾網罩。(圖 28)
- 2** 移除舊濾網。(圖 29)
- 3** 將新濾網插入產品中。
- 4** 關閉濾網罩，並將底部四個角往下壓，直到卡入定位為止。(圖 30)

#### 收藏

- 1** 吸塵管零件彼此套入，將吸塵管縮短為最短長度。
- 2** 使用完畢後，請將產品關閉，並將插頭從牆上插座拔下。
- 3** 按下收線鈕，將電源線收回。(圖 31)
- 4** 若要將產品直立存放，請將吸頭上的突出物插入收藏槽。(圖 32)
- 5** 在您收納三效吸頭時，請務必將它設為地毯設定位置。請避免側邊毛刷彎曲變形。(圖 8)

#### 訂購配件

如果您在購買集塵袋、濾網或其他本產品配件上有任何困難，請連絡您所在國家/地區的飛利浦顧客服務中心，或查詢全球保證書。

#### 訂購集塵袋

- 飛利浦 Classic s-bag™ 紙質集塵袋型號為 FC8021。
- 飛利浦 Clinic s-bag™ 高效過濾集塵袋型號為 FC8022。
- 飛利浦防臭 s-bag™ 紙質集塵袋型號為 FC8023。
- 飛利浦長效 s-bag™ 集塵袋具有超長的清潔集塵效能，型號為 FC8024。

#### 訂購濾網

- 超淨空氣濾網型號為 FC8030。
- 超淨空氣 HEPA 濾網型號為 FC8031。
- 極淨空氣 HEPA 濾網服務編號為 4322 004 92990。

#### 環境保護

- 本產品壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。(圖 33)
- 電池內含可能會污染環境的物質，請勿與一般家庭廢棄物一併丟棄，應送至政府指定的電池回收點進行回收。若要丟棄本產品，也請將電池取出，再將產品送至政府指定的回收點。

## 保固與服務

若您需要相關資訊或有任何問題，請瀏覽飛利浦網站 [www.philips.com](http://www.philips.com)，或連絡您當地的飛利浦客戶服務中心(您可以在全球保證書上找到連絡電話)。如果您當地沒有客戶服務中心，請洽詢當地飛利浦經銷商，或與飛利浦小家電服務部門聯繫。

## 故障排除












### 1 吸力不足。

- 集塵袋可能已滿。  
請更換集塵袋。
- 濾網可能已經髒污。  
請清潔或更換濾網。
- 吸力可能設為低吸力的設定。  
請將吸力設為高吸力的設定。
- 吸頭、吸塵管或軟管可能已經阻塞。  
若要去除阻塞物，請拆除阻塞的部分，並將它以相反的方向(盡可能地)連接。打開吸塵器，使空氣以相反方向強制吹出阻塞的部分。

### 2 紅外線遙控裝置(僅限於特定機型)無法正常運作

- 也許是電池接觸不良或者是沒有正確裝入。  
移開電池槽的蓋子，將電池壓回。請確定正(+)負(-)極放置無誤。
- 電池可能用完。  
更換電池。



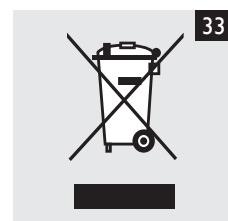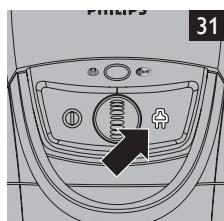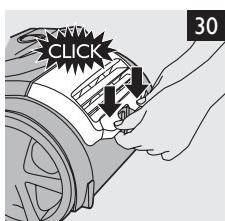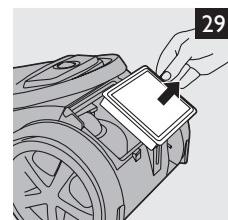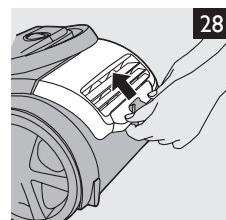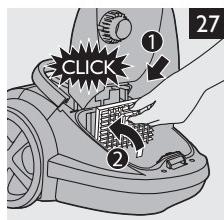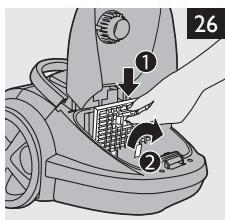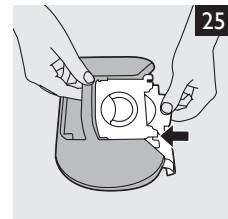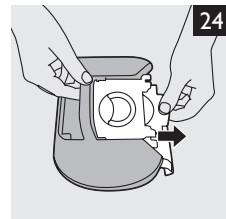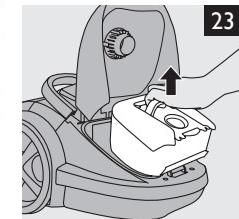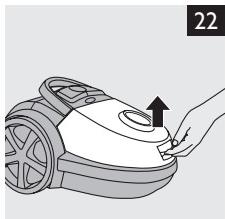





[www.philips.com](http://www.philips.com)

 100% recycled paper  
 100% papier recyclé

4222.003.3325.1